

WATER TANK LEVEL MONITOR

INSTRUCTION MANUAL

MODEL NO: WUS10

TABLE OF CONTENTS

1. INTRODUCTION.	2
1.1 Package Contents.	2
1.2 Features.	2
2. INSTALLATION	2
2.1 Water Tank Sensor Battery Installs.	3
2.2 Set Up Sketch.	4
2.3 Installation Notes.	4
2.4 Indoor Receiver Battery Install.	5
2.5 Initial Set Up.	5
3. OVERVIEW	6
4. PROGRAM MODE	7
4.1 SET TANK DEPTH.	7
4.2 SET TIME.	9
4.3 SET TEMPERATURE UNIT.	10
4.4 SET TANK LEVEL UNIT.	11
4.5 CHECK AND RESET MIN/MAX VALUE.	11
4.6 TANK LEVEL AND TANK TEMPERATURE SWITCH.	14
4.7 ALARM.	14
4.7.1 SET TIME ALARM.	14
4.7.2 SET TANK LEVEL HIGH AND LOW ALARM.	16
4.7.3 ENABLE OR DISABLE ALARM BUZZER.	18
4.7.4 EMPTY ALERT.	19
5. DEFAULT VALUE	19
6. SPECIFICATION	20

This Operation Manual is part of this product and should be kept in a safe place for future reference. It contains important notes on setup and operation.

1. INTRODUCTION

Please read this instruction manual thoroughly to fully understand the correct operation of your Water Tank Level Monitor. The following user guide provides step by step instructions for installation, operation and troubleshooting.

1.1 Package Contents

- 1 x Indoor receiver
- 1 x Water tank transmitter
- Mounting screws
- Instruction manual

1.2 Features

- 12/24 hour time display
- Time alarm
- Indoor temperature
- Tank temperature
- Monitors water tank level
- Level displayed on a 10 element LCD bar graph for water level
- Records min. and max. for indoor and tank temperature/level
- TANK level high/low alarm mode
- All alarm ON/OFF option system
- TANK empty alert
- Transmitter low battery indicator
- Tank level updated 30s or 3 minutes

2. INSTALLATION

2.1 Water Tank Sensor Battery Installs

Note: Please note the polarity when inserting/replacing batteries in the unit, failure to do so may result in permanent damage. Use good quality alkaline batteries or rechargeable batteries.

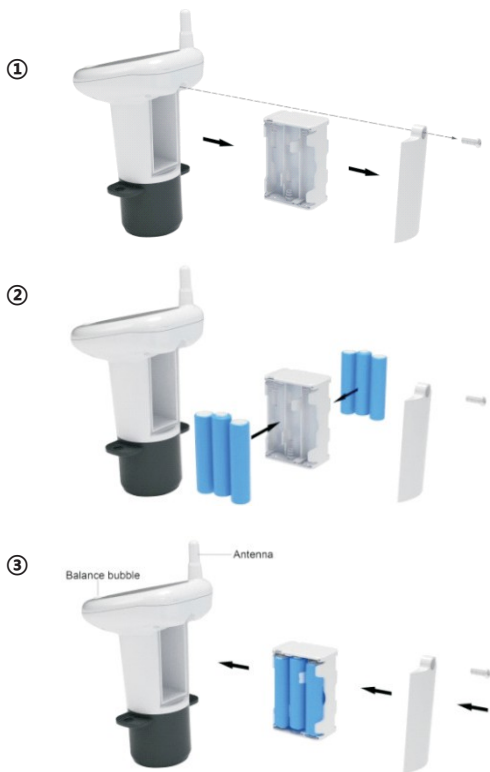


Figure 1

- 1) Open the battery door, remove the batterybox ;
- 2) Insert 6 x AAA 1.5V alkaline batteries into the battery box, observing the correct polarity. Then put back the battery box according to the marking direction.

2.2. Set Up Sketch

The following picture illustrates transmitter installation:

1. Antenna
2. Balance bubble
3. Screw
4. Bracket
5. Sensor
6. Tank

NO	R(m)	H3(m)
1	0.1	≤ 1
2	0.2	≤ 3
3	0.3	≤ 5
4	0.5	≤ 10
5	0.8	≤ 15

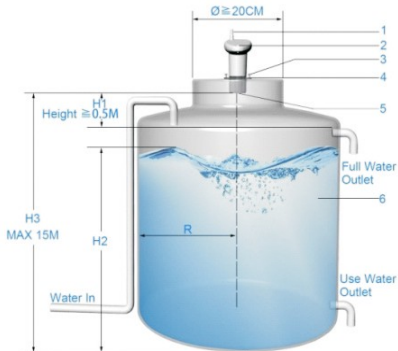


Figure 2

H3: The maximum depth that the sensor can measure.

R: Radius of the tank

Note: Radius of the tank might influence the depth measurement. Please refer the above chart about R and H3.

Please pay attention to the following issues in installation:

- 1) The distance between transmitter bottom and highest water surface must be 0.5m (1.64ft) or more.
- 2) The maximum depth the unit can measure is 15m (49.2ft).
- 3) Observe the balance bubble on the sensor to ensure it is installed at a level horizontal position.

2.3 Examples of Wrong Installation

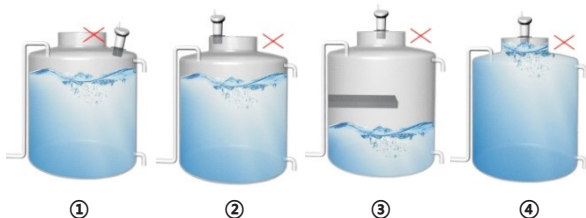


Figure 3

- 1) The sensor is not installed at a level horizontal position.
- 2) The sensor is too close to the TANK wall.
- 3) There are solid objects in the tank.
- 4) The transmitter bottom is dipped in the water (or other liquids in tank)

Note: Even though it works fine in occasional water splash or dew, this product is not completely water proof in heavy rain. It is highly recommended that a cover be installed above the unit.

2.4 Indoor Receiver Battery Installation



Figure 4

Open the base station's battery cover located at the back of the unit and insert 2 x AA, 1.5V alkaline batteries into the battery compartment and close the battery cover.

2.5 Initial Set up

First, insert the batteries into the wireless solar transmitter (6 x AAA) and then insert batteries immediately into the LCD display base unit (2 x AA). Once the batteries are in place, all segments of the LCD will light up briefly.

AAA Batteries: 6pcs



Transmitter

AA Batteries: 2pcs



LCD Display Back



LCD Display Front

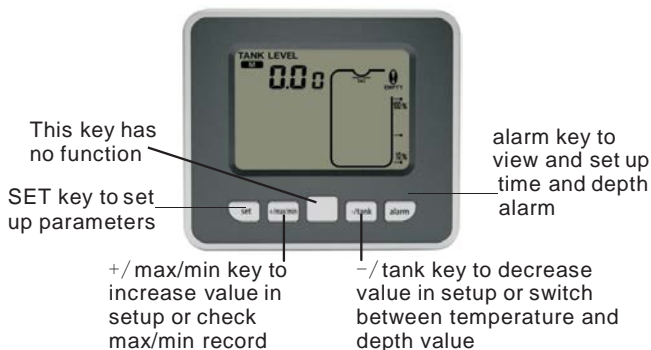


Figure 5

3. OVERVIEW

The following illustration shows a normal LCD display for description purposes only



Figure 6

1. Value display area
2. Tank temperature and water level icon
3. Water level unit
4. Tank temperature unit (°C/°F)
5. Outdoor low battery indicator

- 6. Alarm activation icon
- 7. Min. and max. indicator icon
- 8. Empty alert icon
- 9. RF signal indicator
- 10. Tank level high and low alarm indicator
- 11. Water tank depth icon
- 12. Time alarm indicator
- 13. Time and alarm value area
- 14. Indoor temperature value display area
- 15. Indoor temperature unit

4. PROGRAM MODE

4.1 SET TANK Depth

When the display unit is powered up, the LCD display activates for 3 seconds and makes a "Beep". Then the system displays tank depth setting mode. Display of "0.00" and empty tank icon flashes (Figure 7).



Figure 7

Press +/MAX/MIN key or -/TANK key to increase or decrease tank depth. Hold +/MAX/MIN key or -/TANK key to increase or decrease tank depth at greater step. Press the SET key into the Air Gap setting (Figure 8).

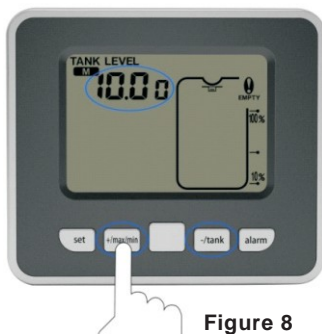


Figure 8

● **NOTE:** The tank depth is defined as the distance from the bottom of the tank transmitter to bottom of your tank. The range is: 0.5M (min)-15.0M(max) or 1.64" (min)-49.2" (max)

Display of "0.00" and full tank icon flashes(Figure 9). Press +/MAX/MIN key or -/TANK key to increase or decrease air gap. Long press +/MAX/MIN key or -/TANK key to increase or decrease air gap at greater step. Press the SET key to exit depth setting



Figure 9

● **NOTE:** Air Gap(see H1 in sketch of 2.2) is defined as the distance from the bottom of the tank transmitter to the maximum fluid level of tank. The range is: 0.5M(min)-15.0M(max) or 1.64" (min)-49.2" (max)

If there's no key operation in depth setting mode for longer than 15s the unit will switch to normal display mode automatically. (There will be measurement errors if the tank depth and air gap are not set correctly).

If you miss this step, tank depth and air gap can be set later. In normal operation mode, press and hold SET and ALARM keys at the same time for 5 seconds to set Tank Depth and Air Gap values. The setting steps are the same as above described.

4.2 SET TIME

In normal display mode press SET key for 3 seconds to enter SET mode (Figure 10).

- 12/24H: 12Hr or 24Hr will flash. Press +/MAX/MIN or -/TANK key to select 12H or 24H. Press SET key to move to hour setting.

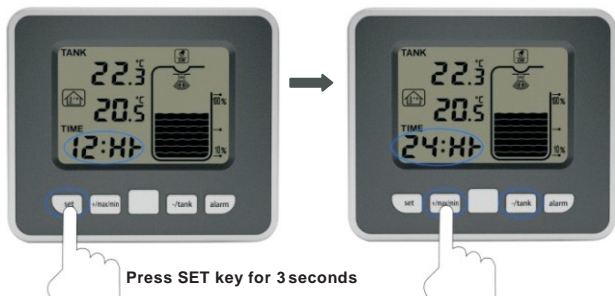


Figure 10

- **HOUR:** Hour value will flash. Press +/MAX/MIN or -/TANK key to increase or decrease hour value. When hour value is set press SET key to set minute value(Figure 11).

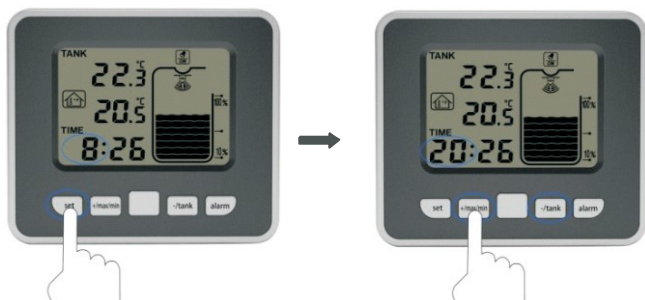


Figure 11

- **MINUTE:** Minute value will flash. Press +/MAX/MIN or -/TANK key to increase or decrease minute value. When minute value is set press SET key to set temperature unit (Figure 12).



Figure 12

4.3 SET TEMPERATURE UNIT

- Temperature unit will flash. Press +/MAX/MIN or -/TANK key to select temperature unit of °C or °F. After temperature unit is set press SET key to set tank level unit (Figure 13).

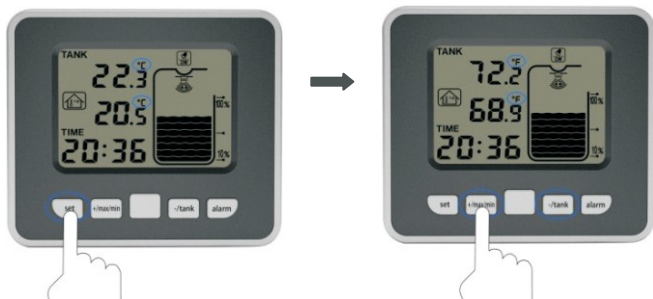


Figure 13

4.4 SET TANK LEVEL UNIT

- Tank level unit will flash. Press +/MAX/MIN or -/TANK key to select water level unit of meter or feet. After tank level unit is set press SET key to exit (Figure 14).

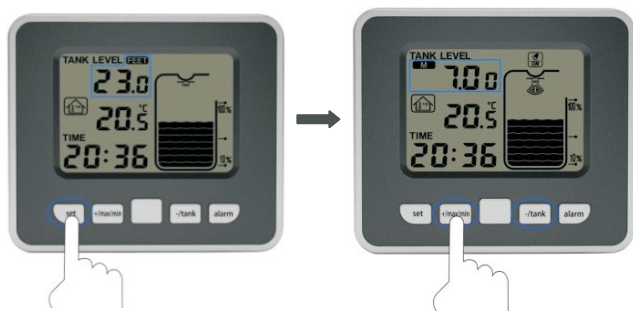


Figure 14

4.5 CHECK AND RESET MIN/MAX VALUE

- In normal display mode press +/MAX/MIN key once to check the max value of indoor temperature and tank level or tank temperature (Figure 15).



Figure 15

- Press +/MAX/MIN key again to check the min value of indoor temperature and tank level or tank temperature(Figure 16).



Figure 16

- Press +/MAX/MIN key again to exit (Figure 17).



Figure 17

- In the MIN/MAX mode press SET key, min or max icon and value will flash. Press the +/MIN/MAX key once, the displayed minimum or maximum record will be reset to current value. Press SET key to reset the next minimum or maximum record (Figure 18).



Figure 18

4.6 TANK LEVEL AND TANK TEMPERATURE SWITCH

● In normal display mode press -/TANK key to switch from tank level display to tank temperature display or switch from tank temperature display to tank level display (Figure 19).



Figure 19

● When transmission signal is lost long press the -/TANK key for 5 seconds to re-connect with transmitter (Figure 20).



Figure 20

4.7 ALARM

4.7.1 SET TIME ALARM

In normal display mode press ALARM key. Previously set time alarm will display (Figure 21).



Figure 21

Press SET key 3 seconds to set alarm hour. Alarm hour will flash. Press +/MAX/MIN or -/TANK key to increase or decrease alarm hour (Figure 22).

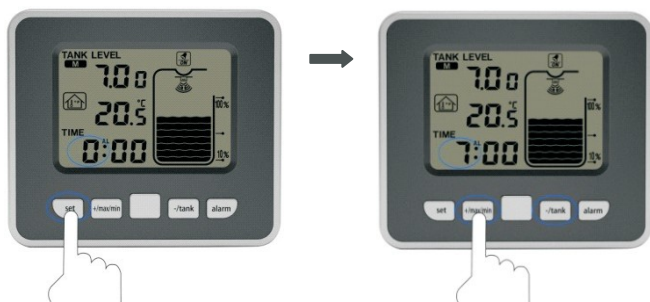


Figure 22

After alarm hour is set press SET key to set alarm minute. Press +/MAX/MIN or -/TANK key to increase or decrease alarm minute (Figure 23).

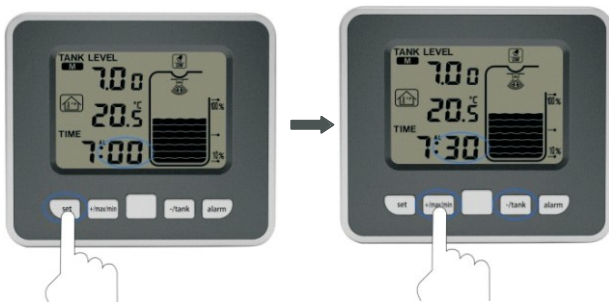


Figure 23

During alarm hour or minute flashing press ALARM key to enable or disable time alarm. When time alarm is enabled the icon is visible. When time alarm is disabled the icon is invisible. Press SET key to confirm time alarm setting and start to set level high or low alarm (Figure 24).



Figure 24

4.7.2 SET TANK LEVEL HIGH AND LOW ALARM

After finish time alarm setting previously set tank level alarm value will flash. Press +/MAX/MIN or -/TANK key to increase or decrease high alarm value (Figure 25).



Figure 25

After tank level high alarm is set press SET key to set tank level low alarm. Previously set tank level low alarm value will flash. Press +/MAX/MIN or -/TANK key to increase or decrease low alarm value (Figure 26).



Figure 26

During high or low alarm value flashing press ALARM key to enable or disable water level alarm. When high or low alarm is enabled the icon is visible. When high or low alarm is disabled the icon is invisible (Figure 27).




Figure 27

After tank level low alarm is set press **SET** key to exit (Figure 28).



Figure 28

4.7.3 ENABLE OR DISABLE ALARM BUZZER

In default setting the alarm buzzer is enabled. To disable the alarm buzzer press **ALARM** key for 5 seconds. The alarm icon  will disappear. Press **ALARM** key 5 seconds again to enable alarm buzzer. The alarm icon will appear (Figure 29).

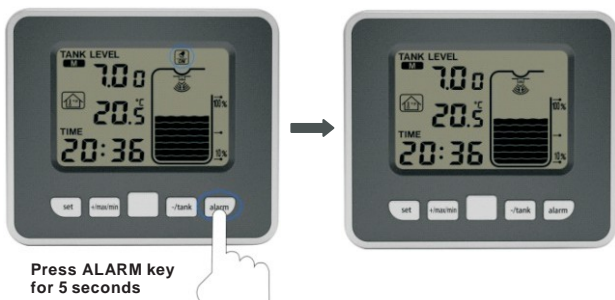


Figure 29

4.7.4 EMPTY ALERT


When water level is less than 20% of tank depth the icon  will display (Figure 30).



Figure 30

5. DEFAULT VALUE

1. Time : 0:00—23:59 (default: 0:00)
2. 12HR/24HR format : (default: 24HR)
3. Temperature unit : °C/°F (default: °C)
4. Water level : meter/feet (default: m)
5. TANK LEVEL/TANK TEMP display: (default: TANK TEMP)
6. Alarm set : 0:00—23:59 (default: 12:00, disable)
7. Water level HI-alarm : 0—15m (0 feet -49.2 feet) (default: 10m, OFF)

8. Water level LO-alarm : 0–15m (0 feet -49.2 feet) (default: 2m, OFF)

6. SPECIFICATIONS

Transmission distance: max.100 metres (in open space)

Frequency: 433MHz

Indoor temperature range: 0 - -50°C,

Resolution: 1°C,

Accurate : +/-1°C,

Tank temp measure range : -40 - -60°C,

Resolution: 1°C,

Accurate : +/-1°

Water level measure range : 0 - 15m,

Resolution: 0.01m,

Accurate: +/-0.03m

Alarm duration: 120 sec

Power consumption

- Indoor receiver: 2 x AA 1.5V batteries

Life: Minimum 12 months

- Tank transmitter: 6 x AAA 1.5V batteries

Life: Minimum 24 months



7. Water Tank Level Monitor installation

